Pioneer sound.vision.soul

Service Manual

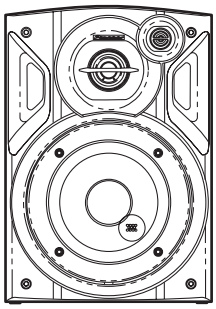

ORDER NO.
RRV2511

SPEAKER SYSTEM

S-VS200V XJI/E

S-VS200V XJI/NC

● **This product is component of system.**

Component	System		Service Manual	Remarks
COMPACT MINI COMPONENT	X-VS200	X-VS200SW	————	
STEREO CD/VCD CASSETTE DECK RECIEVER	XR-VS200	XR-VS200SW	RRV2503	
SPEAKER SYSTEM	S-VS200V	S-VS200V	RRV2511	This service manual

FOR PRECAUTION OF REASSEMBLY AND DISASSEMBLY

- The cosmetic baffle assy is attached to the cabinet by 4 external hexagon socket screws. To detach the cosmetic baffle assy, loosen these screws by the hexagon screw driver. Then carefully disconnect the wires of the woofer and mid-range mounted on the cosmetic baffle assy. To attach the cosmetic baffle assy, replace it on the cabinet correctly and secure with 4 screws.
- The woofer is attached to the cosmetic baffle assy by 4 internal screws. To detach it, unfasten these screws. When attaching it, face its terminal downward.
- The mid-range is attached to the cosmetic baffle assy by 2 internal screws. To detach the mid-range, loosen these screws. Then carefully disconnect the wires of the tweeter mounted on the cosmetic baffle assy by adhesion. To attach the mid-range, face its terminal downward.
- When exchange the tweeter, do it with the cosmetic baffle assy.

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS SERVICE, INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
©PIONEER CORPORATION 2001
T-ZZM AUG. 2001 Printed in Japan

PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*

Mark	No.	Description	Part No.
NSP		Cabinet	SMM1938
		Network ASSY	SWN1678
		Gasket (for Baffle horizontal)	SEC1359
		Non Skid Pad	SEC1374
		Gasket (for Baffle vertical)	SEC1380
		Cosmetic Baffle ASSY (L)	SXB1432
NSP		├ Duct	SMR1334
NSP		├ Punching Net	SNC1183
NSP		├ Cosmetic Baffle (L)	SNK2511
		└ Diaphragm ASSY 20	SXE1092
NSP		├ Ceramic Tweeter	SCA1017
NSP		├ Terminal (Red)	SKF1034
NSP		└ Terminal (Black)	SKF1035
		Cosmetic Baffle ASSY (R)	SXB1433
NSP		├ Duct	SMR1334
NSP		├ Punching Net	SNC1183
NSP		├ Cosmetic Baffle (R)	SNK2512
		└ Diaphragm ASSY 20	SXE1092
NSP		├ Ceramic Tweeter	SCA1017
NSP		├ Terminal (Red)	SKF1034
NSP		└ Terminal (Black)	SKF1035

Mark	No.	Description	Part No.
		Speaker (Woofer)	A14LU83-55D
		Speaker (Mid-range)	E52AP39-60D
		Screw (for Mid-range)	BPZ40P080FMC
		Screw (for Woofer)	BPZ40P100FMC
		Tapping Screw (for Cosmetic Baffle)	SBA1162
(for XJI/E type)			
NSP		Stamped Model Label (L)	SME3145
NSP		└ Model Label (L)	SAN2938
NSP		Stamped Model Label (R)	SME3146
NSP		└ Model Label (R)	SAN2939
(for XJI/NC type)			
NSP		Stamped Model Label (L)	SME3222
NSP		└ Model Label (L)	SAN2979
NSP		Stamped Model Label (R)	SME3223
NSP		└ Model Label (R)	SAN2980

For Packing

	Top Protector	SHA2282
	Bottom Protector	SHA2283
	Packing Case (for XJI/E type)	SHG2335
	Packing Case (for XJI/NC type)	SHG2361
NSP	Polyethylene Bag S5	SHL1212

SCHEMATIC DIAGRAM

Network ASSY (SWN1678)

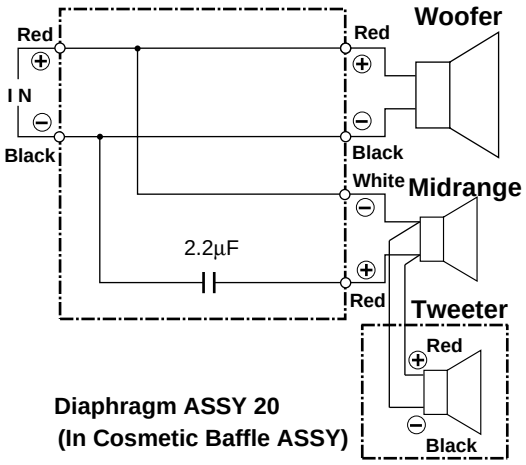

PRODUCT APPEARANCE

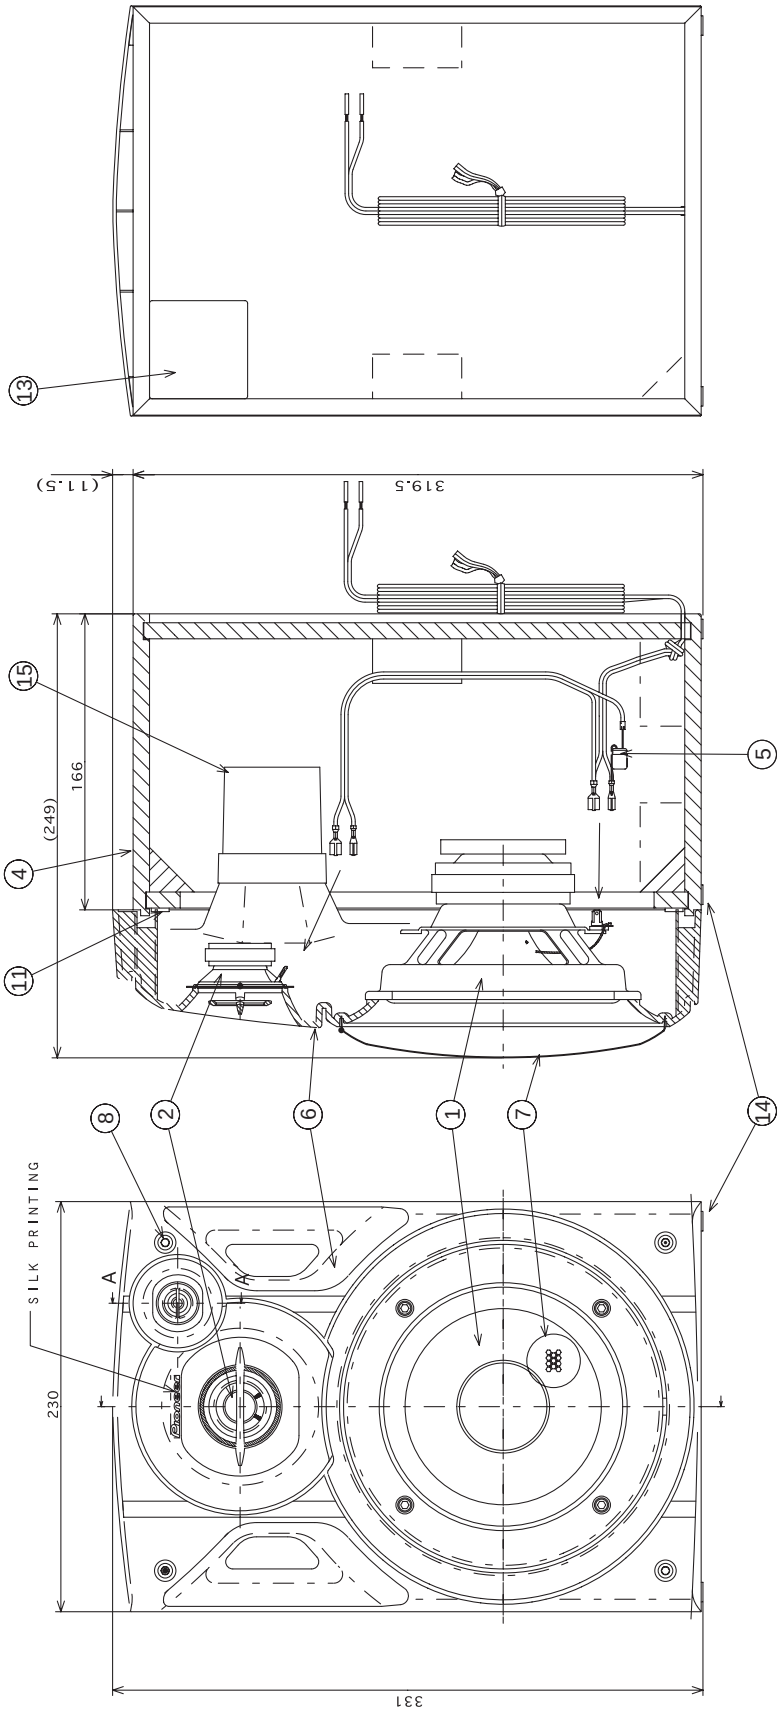

No.	Part name	Num.	Remarks
1	Speaker		Woofer(A14)
2	Speaker		MID(E52)
3	Speaker		Tweeter(PIEZO)
4	Cabinet		
5	Network assy		
6	Cosmetic baffle(R)		
7	Punching net		
8	Screw		M4x55(Hexagon socket)
9	Screw		M4x10 (WF)
10	Screw		M4x8 (Mid)
11	Gasket	2	Horizontal
12	Gasket	2	Vertical
13	Model label(R)	1	
14	Non skid pad	4	
15	Duct	2	
16			

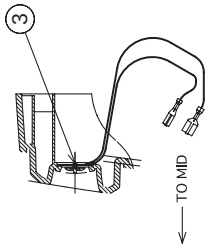

SECTION A-A'